



## **MF10, 20, 30, 40 Manual-Fill Water Boiler**

### **Usage:**

1. Before first use, please check all parts are in good order, check whether the power supply is in compliance with the rated nameplate. Power supply cord must plug into an independent-control outlet which is with leakage protection and overload protection. Do not use on an extension lead
2. Open top cover of the water boiler and fill the tub with SOFTENED filtered water before turning on the power.
3. Turn on the power and pilot light is illuminated, after the water has boiled, adjust the temperature control to the desired position, and the temperature of water shall be kept at that desired temperature.
4. If lime scale build up is noticed inside the boiler descale and clean out the interior periodically.
5. Do not immerse or wet the exterior, clean using a damp cloth with mild detergent and dry thoroughly.

**WARNING: ALL MAINTENANCE WORKS SHOULD BE CARRIED OUT AFTER THE POWER SUPPLY HAS BEEN DISCONNECTED. ENSURE THAT THE BOILER IS DRAINED AND ALLOWED TO COOL BEFORE MOVING IT.**

### **Note:**

1. The water boiler must be located on the circumstance of air circulating, the air humidity not more than 85%.
2. Always monitor the water level, top up frequently, and NEVER allow to run dry.
3. If the water is boiling up too much, (boiling for over 3 minutes) reduce the thermostat to a cooler setting.
4. If machine fails to operate, disconnect from electrical supply, empty and rest the overheat cutout switch underneath the boiler.
5. Do not fiercely pull the power supply cord in order to prevent the power supply cord damaged and electric leakage caused.
6. Unplug the power supply cord and fully drain and dry the unit if not use it for a long time.

**CAUTION: THE WATER BOILER MUST BE PROPERLY GROUNDED AND SERVICED BY A COMPETENT SKILLED TECHNICIAN.**