 
 


USER MANUAL


Sauce Warmer

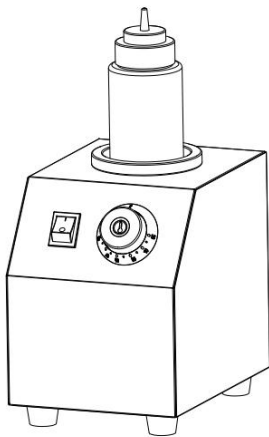


BW1

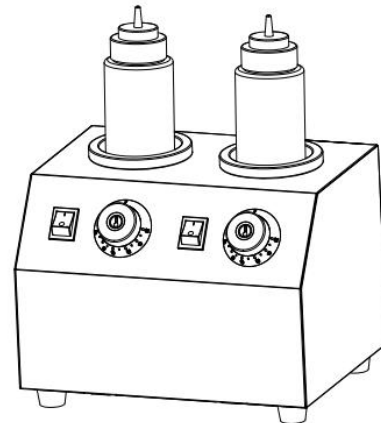

 BW2

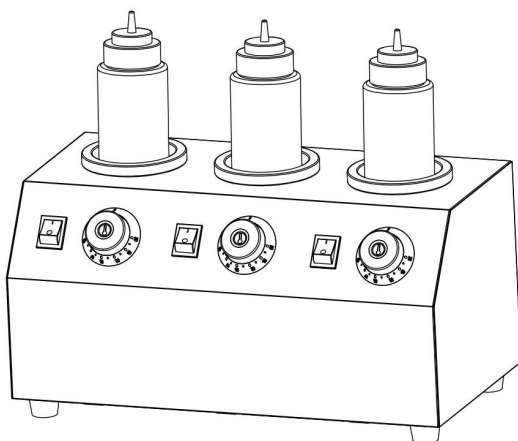

BW3

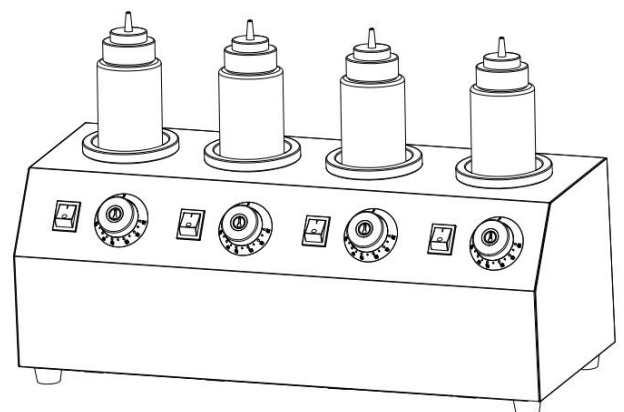 

BW4

Please read and keep these instructions. Indoor use only.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed, including the following:

Read all instructions carefully and completely.

For commercial use only.

Do not touch hot surfaces.

Protect against electrical shock by keeping all cords, plugs, and other electrical components away from water or other liquids.

Unplug this unit when not in use and before cleaning.

Allow the unit to cool before putting on or taking off parts.

Do not operate this or any appliance with a damaged electrical cord or plug.

Do not operate this or any appliance after it has malfunctioned or been damaged in any way.

Do not use outdoors.

Do not place on or near a hot gas or electric burner.

Attach plug to appliance first, then plug electrical cord into the wall outlet.

Disconnect the unit by turning the temperature and timer control to "OFF", then removing the electrical plug from the wall outlet.

Do not use appliance for any application other than intended use.

Do not insert metal utensils or over sized foods into this unit as they may cause a fire and heighten the risk of electrical shock.

Do not store any item on top of this unit when in operation.

Do not allow this oven to touch or be covered by flammable material, such as curtains, draperies, walls, etc., when in operation.

Do not clean with metal scouring pads as pieces can break off and touch electrical components, heightening the risk of electrical shock

Never place materials such as paper, cardboard, plastic, etc. in this oven.

Do not cover interior of this unit with metal foil as it may cause the oven to overheat.

Avoid scratching the surface or nicking the edges of this unit's tempered, safety glass door. If the oven door has a scratch or nick, contact customer service before use.

Turn the appliance off by turning the temperature and timer control to the "OFF" position.

Note that the use of accessories not recommended by the manufacturer may result in injury.

 
Children should be supervised to ensure that they do not play with the oven.

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. When using the appliance in shops, snack bars, hotels etc., check the voltage and outlet to make sure the appliance is correctly connected with power.

Place unit on a flat surface that is well ventilated. The appliances must be supervised during operation, DO NOT leave appliance without powering off.

NOTE: Save these instructions for future reference.

Identification of Key Parts

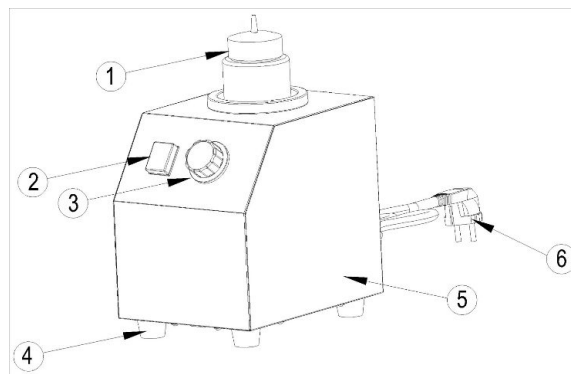

Inner barrel 2.Power switch 3.Control knob 4.Foot 5.Housing 6.Power cord

Technical Information

The electric warmer keeps your sauce warm for quick and easy of dish. It fits for 35oz(1000ml) bottles.

Temperature control from 0 to 85°C.

Model No.	Voltage	Herz	Power	Product size(mm)	Package size(mm)
BW1	220-240V	50Hz	200W	165x250x355	205x275x375
BW2	220-240V	50Hz	400W	300x250x355	340x275x375
BW3	220-240V	50Hz	600W	435x250x355	475x275x375
BW4	220-240V	50Hz	800W	570x250x355	610x275x375

Operation

Choose an easy-to-clean work surface on which to install the appliance. The appliance must be at least 20cm from any vertical surfaces that are not heat-resistant. To ensure maximum ease of use, the appliance should be between 85 and 95 cm from the ground.

Please clean the bottle with soapy water before the first usage.

Never put the food straight from the pot.

Warmer is intended use with 35oz(1000ml) sauce bottle.

Plug in electricity

Turn on power switch

3. Turn control knob on 85°C and preheat warmer for 15 minutes without the bottle.

4. Be sure to pour into the bottle the amount of preparation necessary to ensure a service of 2 hours maximum.

5. Turn the control knob between 50 and 65°C maximum to keep warm then insert the bottle inside the warmer.

6. Sauce bottle must not be heated above 65°C.

7. Please noted that sauce bottles are not intended for storage. After each service (maximum 2 hours), they must be emptied of excess preparation and then cleaned.

Cleaning and Care

Before cleaning your appliance, unplug it and let the warmer cool down.

Read the general rules applicable to electrical equipment before any action on the appliances.

Clean and use soft cloth and mild soap on exterior.

Never use metal scouring pads, strong abrasives or detergents on exterior.

 
 
Never clean the appliance by immersing in water or using a water jet.

Clean the bottles in warmer water with non-chlorinated liquid detergent and a brush.

The bottles can be cleaned in a dishwasher under the condition that the inner temperature of the dishwasher does not exceed 65°C.

When storing, set power switch to "OFF" position.


Circuit diagram

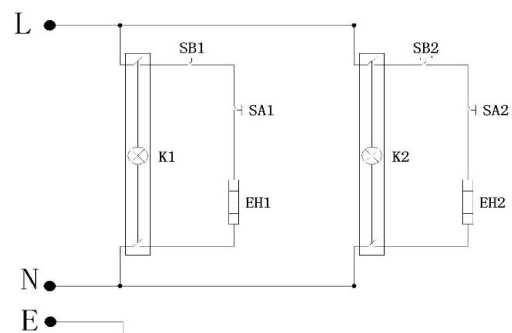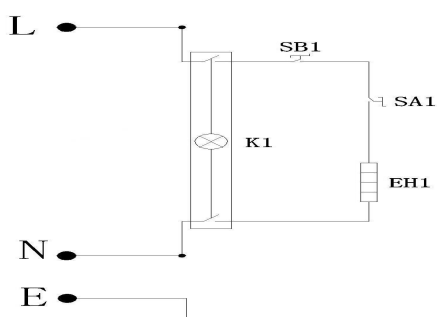

AC220-240V

AC220-240V

 AC220-240V

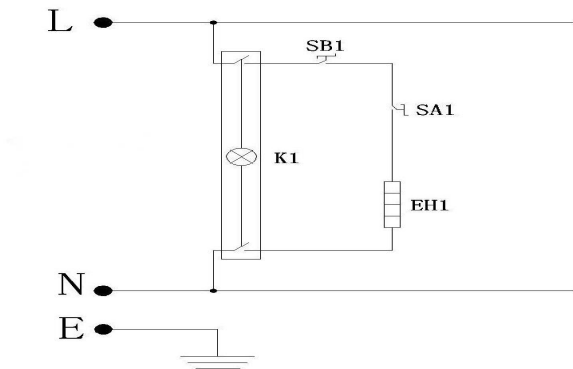


BW2 CIRCUIT CONNECTION DIAGRAM		
ONE	K1 K2	POWER SWITCH
TWO	SB1 SB2	TEMPERATURE LIMITER
THRE E	SA1 SA2	THERMOSTAT

3 ELEMENT
N DIAGRAM
R SWITCH
ERATURE
MITER

MOSTAT

 AC220-240V

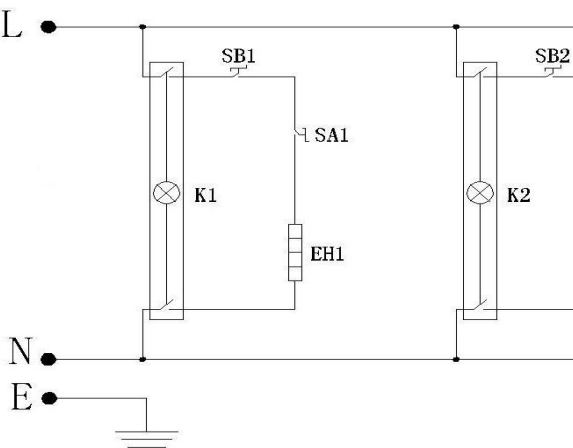

FOU R	SA3 EH1 EH2 EH3	HEATING ELEMENT
BW4 CIRCUIT CONNECTION DIAGRAM		
ONE	K1 K2 K3 K4	POWER SWITCH
	SB1 SB2	TEMPERATURE

AT
MENT

GRAM
CH

TWO	SB1	TEMPERATURE LIMITER
THRE E	SA1	THERMOSTAT
FOU R	EH1	HEATING ELEMENT