

FOOD WARMER CART

(With 2 Tier Heated Gantry)

INSTRUCTION MANUAL



Please read this instruction manual carefully before operation

 
MAIN TECHNICAL PARAMETERS

MODEL	HYH09HD	HYH12HD	HYH15HD	HYH18HD
DIMENSION	900*600*860(+700)MM	1200*600*860(+700)MM	1500*600*860(+700)MM	1800*600*860(+700)MM
TEMPERATURE	30~110°C	30~110°C	30~110°C	30~110°C
POWER	0.65+0.6+0.6 kW	0.95+0.9+0.9 kW	1.25+1.2+1.2 kW	1.55+1.5+1.5 kW
VOL/FRE	220 V / 50 Hz	220 V / 50 Hz	220 V / 50 Hz	220 V / 50 Hz


FEATURES

Food warmer carts are some key features you


- Designed with incorporates a
- Insulated compartment
- Independent temperature types of food, etc
- Constructed with resistance to corrosion
- Compatible with suitable for bulk
- Safety features reliable operation
- A simple plug-and

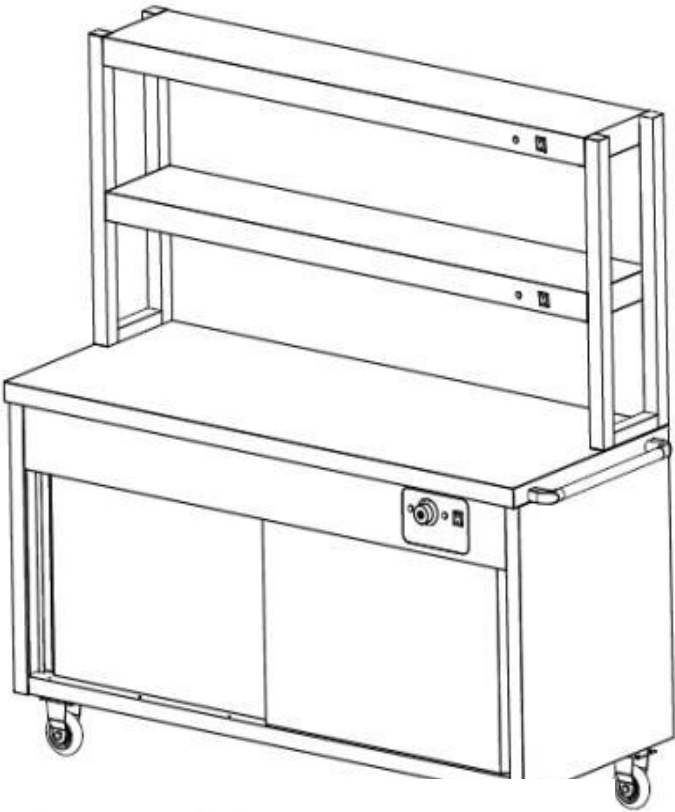

 ed gantry. Here are
hat
ettings to suit different
and
od quantities, making it
ure stability and

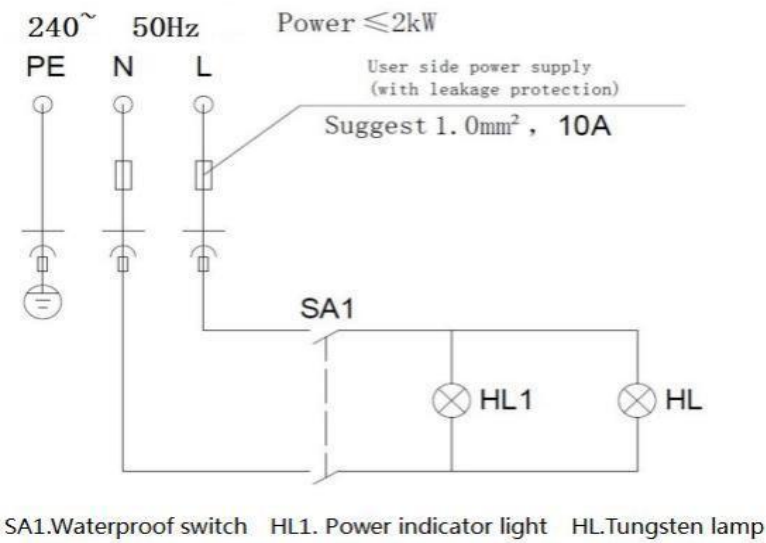

SAFE

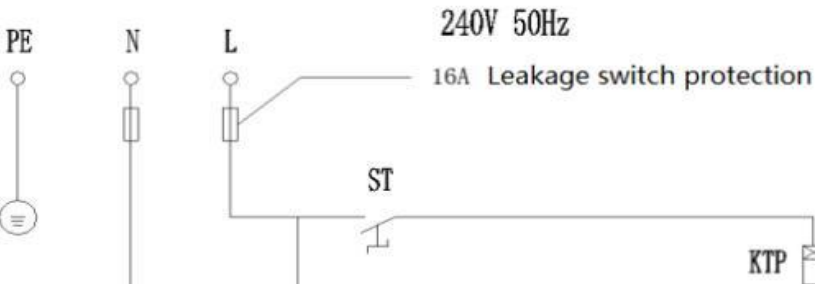 

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology. Should you have any questions, please contact the manufacturer.

For safety purpose and efficient operation, please read the manual carefully before any operation to the appliance, especially when starting up the device. Install the machine in accordance with this manual and the local related rules.

Please note that this manual is not applicable for those who have physiological, perceptual or psychological barriers or disability, as well as those who are lack necessary knowledge or experience, including children.

NOTICE! Read the instruction manual carefully before using the device. The manufacturer does not accept liability for any damage or malfunction resulting from not following the instructions for use.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

WARNING!

ANY REFITTING AND WRONG INSTALLATION, ADJUSTMENT AND MAINTENANCE CAN LEAD TO PROPERTY LOSS AND CASUALTY. PLEASE CONTACT THE SUPPLIER IF YOU NEED TO AJDUST OR MAINTAIN IT AND ALL THESE SHOULD BE CARRIED OUT BY AUTHORISED PROFESSIONALS ONLY.

WARNING!

DO NOT PUT FLAMMABLE LIQUID, GAS OR OTHER OBJECTS IN OR AROUND THE PRODUCT TO ENSURE SAFETY.

TRANSPORTATION AND STORAGE

When transporting the food warmer cart, it is important to follow certain guidelines to ensure safety, equipment longevity, and proper hygiene. Ensure the following guidelines are adhered to during storage:

- DO NOT store outdoors or expose it to the elements. Extreme cold can cause metal to become brittle, and excessive heat can damage electrical components.
- Store in a well-ventilated area. Avoid environments with corrosive gases.
- Always keep the unit upright; do not place it upside down to maintain the integrity of the internal components and ensure proper function when it is in use again.
- Due to the heavy and delicate nature of the heating elements, ensure the unit is handled carefully, especially during loading and unloading.
- Do not place heavy objects on top of the unit, especially on the gantry to prevent damage.
- Use a dust cover or protective wrap to keep the unit clean and free from debris.
- If stored for an extended period, inspect the unit periodically to ensure it remains in good condition, free from pests, mold, or moisture. Also, check the power cord for any signs of wear or damage.
- Lock castors before loading and unloading the cart. Ensure this is secured with straps to prevent movement during transit. Use shock-absorbing materials where

possible and avoid bumpy or uneven surfaces to prevent misalignment of shelves or gantry.

INSTALLATION INSTRUCTIONS

1. Carefully remove the unit from its packaging. Inspect for any visible damage. If damaged, do not use and contact the supplier. Ensure all components, including the heated gantry, power cord, and accessories, are included. These will be flat packed separately.
2. Place the cart on a stable, flat surface to prevent tipping and lock the castors to keep in place. Keep away from flammable materials, water sources, and plastic surfaces.
3. Attach the heated gantry to the base and tighten all screws and brackets securely to prevent instability.
4. Do not install the unit in areas where it may be exposed to excess moisture, such as near sinks or dishwashing areas. Electrical components can be damaged by water, leading to electrical hazards. Choose a well-ventilated location to allow heat to dissipate, preventing the unit from overheating and ensuring proper airflow around the heating elements.
5. Ensure each separate power supply for the unit is plugged into a dedicated outlet to prevent electrical overload. The unit's operating voltage must match the supplied voltage before installation. The unit must be connected to a properly grounded power source to prevent electrical shock or malfunction.
6. Install the unit in a location where it can be easily accessed for daily cleaning and general maintenance. Proper cleaning is critical to food safety and the longevity of the equipment.
7. Make sure the power cords are securely connected and not hanging loosely, which could be a trip hazard.
8. Check the thermostats are functioning correctly, and that the unit reaches required temperature evenly. Check the indicator light is on operating temperature is reached.

 
Set the heat control to your desired temperature. Allow the unit to run for several minutes and check if it heats up correctly. Check for unusual smells, noises, or malfunctions before placing food inside.

NOTICE!

This equipment must only be operated by trained professionals or experienced cooks.

- Be cautious of electric shock hazards. Water can conduct electricity, and any electrical leakage may cause accidental shock.
- DO NOT connect the unit to a power supply with a voltage different from the specified requirements.
- Ensure that the main power switch complies with safety regulations before use.

OPERATIONAL USE

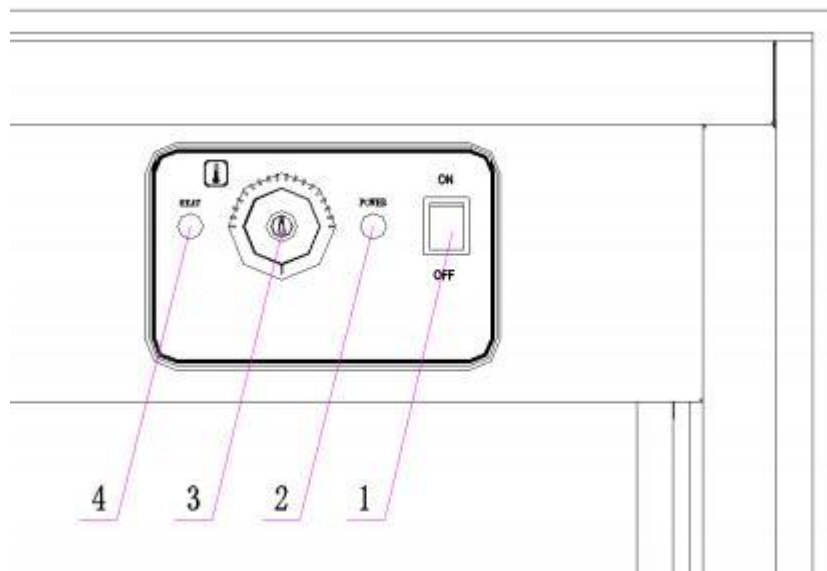

1) Main Switch. 2) Power Indicator Light. 3) Temperature Controller. 4) Heating Indicator Light.

1. Power On and Set Temperature

Once unit has been positioned correctly, before powering the unit on, check switches are set to off and the thermostat is positioned at 0.

Once checked, connect the unit to the power supply, then turn on the power using switches located at the front of the unit.

2. Set Temperature

Adjust the thermostat and set the temperature to the recommended level, to keep the food warm without overcooking or drying it out. If using, ensure the overhead gantry lights are switched on, and check that it is providing even heat distribution from above.

Allow the unit to preheat for several minutes (usually 5-10 minutes) until it reaches the desired temperature. The indicator light will turn off when the unit is ready for use. The unit will then automatically go into constant temperature state.

3. Placing Food on the Unit

Place pre-cooked food on the top of the cart, as this unit is designed for holding temperature, not cooking. Make sure the dishware is clean to avoid excess oils and food debris on the gantry surface. Avoid overloading the unit, as overcrowding can prevent proper heat circulation, leading to uneven warming.

4. Closing down

Once you are finished with the unit, ensure the thermostat is repositioned to 0, and the lights are switched OFF, and then turn the power to the unit OFF.

Additional Tips for Safe Use:

- DO NOT touch the heating element during use in case of scalding.
- Always monitor the temperature to avoid overcooking the food, but also that it maintains a safe serving level.
- The unit will have a hot surface, especially near the heating elements or around the heat lamps. Always use gloves or a cloth when handling trays or parts close to the heat source.
- Keep the unit away from water sources, as water encountering hot oil or electrical components can cause malfunctions or safety hazards.

CLEANING AND MAINTENANCE

1. Disconnect Power Before Cleaning

Always cut off the power supply before beginning any cleaning to prevent accidents or electrical hazards. Allow the unit to cool down completely before cleaning or

moving it.

2. Proper Cleaning Methods

Use a damp, non-corrosive cloth with warm water and a mild detergent to wipe down the exterior surface and the power cord. Never use excessive water or spray the unit directly, as this could damage its electrical components and affect its functionality.

3. Power Off When Not in Use

When the unit is not in use, ensure the thermostat, lights, and the main power switch are turned off to conserve energy and prevent unnecessary wear.

4. Long-Term Storage

If the unit will not be used for an extended period, clean it thoroughly and store it in a well-ventilated area that is free of corrosive gases. This helps maintain the equipment’s longevity and prevents damage while in storage.

NOTICE!

- DO NOT attempt to replace any parts yourself. All repairs or servicing must be carried out by a qualified technician.
- If the power cord is damaged, contact the manufacturer, service department, or a licensed professional for replacement to avoid potential hazards.

DAILY CHECKS

Performing daily checks on an electric food warmer cart is crucial for ensuring safety, operational efficiency, and maintaining food quality. Below are the recommended daily checks you should conduct before, during, and after use:

BEFORE USING	Is the machine tilted or on a solid, stable surface? Is this surface heat-resistant?
	Confirm that the main power switch is functioning correctly.
	Verify that all control knobs are in the OFF position before plugging in.
	Are the power cords old, broken or damaged? Look for any frays, cuts, or exposed wires in the power cord. Ensure they’re not kinked or pinched.
	Verify that the unit is clean, with no residual oil, grease, or food debris from previous use.
	Check that the gantry is securely attached and positioned correctly.
	Ensure the unit has proper clearance from walls or flammable objects as specified in the installation instructions.
DURING USE	Turn the unit on and allow it to preheat. Observe whether the heating elements or heat lamps are functioning properly.
	Periodically check the thermostat to ensure that the temperature remains within the desired range. If the temperature fluctuates, adjust it accordingly.
	Ensure the heated lamps continue to stay on and provide even heat distribution without flickering.

TROUBLESHOOTING

This table covers common operational issues and provides straightforward solutions to help troubleshoot problems effectively.

		Ensure food is evenly placed for proper heat distribution.
		Watch for any burning smells or smoke, which could indicate an issue with the heating element or oil burning.
		Ensure the unit is operating without unusual noises or odours.
ISSUE	POSSIBLE CAUSE	SOLUTION
Unit does not turn on AFTER USING	- Not plugged in properly	- Turn off and unplug the unit from power sources and allow the unit to cool before plugging it in.
		- Ensure the unit is plugged into a properly grounded outlet.
		- Inspect the heating elements or heat lamps for any signs of wear, discoloration or damage.
		- Clean the unit's exterior and power cords to remove any grease or food splatter.
	- Faulty power outlet or tripped breaker	- Test the outlet with another device.
		- Wipe down the unit's interior, including removable parts with a non-corrosive, damp cloth.
	- Blown internal fuse or tripped breaker	- Make sure the unit is completely clean and dry with no lingering grease or food residue that could attract pests or lead to hygiene issues.
Base or gantry does not heat up		- Reset the internal fuse.
	- Damaged power cord	- Completely clean and dry the unit.
		- Confirm that the ventilation remains free of obstructions.
		- Use a dedicated power source to maintain the unit.
		- Inspect the power cords and replace if damaged.
		- If storing the unit for the night or an extended period, cover it with a dust cover or plastic wrap to keep it free from dust.
	- Internal wiring issue	- Contact a technician to inspect the internal fuse.
	- Blown internal fuse	- Have a qualified technician inspect and replace the fuse.
	- Thermostat is set too low	- Increase the temperature setting on the thermostat.
Unit overheating or too hot	- Food not evenly distributed	- Stir the food more evenly across the tray.
	- Heating element malfunction	- Check if the heating element is damaged, contact a technician and replace if necessary.
	- Overloading the unit	- Avoid overloading the unit.
	- Electrical connection issue	- Ensure power cord is properly connected, amount manageable, and outlet is functioning.
Wheels are not rolling properly	- Thermostat malfunction	- Test and recalibrate the thermostat if possible.
	- Heating elements are dirty or faulty	- Clean or replace heating elements.
	- Faulty temperature sensor	- Contact a technician if necessary.
Electrical smell or smoke		- Check and replace the thermostat or sensor if needed.
	- Dirt or debris stuck in wheels	- Clean and lubricate the wheels.
	- Wheels are loose or damaged	- Tighten screws or replace damaged wheels.
	- Debris or grease buildup on heating elements	- Turn off and unplug immediately.
	- Electrical short circuit	- Clean any grease or debris from the unit.
	- Overheated components	- Contact a technician if the problem persists.
	- Overloaded circuit	- Use a dedicated power outlet.

Unit trips the circuit breaker	- Short circuit in the warmer	- Inspect for damaged wires and get professional servicing
	- Faulty power cord	- Avoid using extension cords or overloaded sockets

DISPOSAL OF OLD MACHINE

When your electric food warmer cart reaches the end of its useful life, it must be disposed of in an environmentally responsible manner. Follow these steps for proper disposal:

1. Disconnect from Power Supply
Ensure the unit is completely disconnected from the power supply. Remove the plug from the outlet and, if necessary, cut the power cord to prevent accidental reuse.
2. Consult Local Regulations
Check your local regulations regarding the disposal of electrical appliances. Most regions have specific guidelines or designated facilities for recycling or safely disposing of electric equipment to minimise environmental impact.
3. Recycling
Many components of the unit, such as metal parts, wiring, and certain electronic components, can be recycled. Contact a certified e-waste recycling centre or your local waste management facility to ensure the unit is properly dismantled and recycled.
4. Hazardous Materials
The unit may contain electronic components or other materials (such as insulation) that could be hazardous if not disposed of correctly. Ensure these parts are handled by a professional or through an authorized recycling program.
5. Avoid Landfills
Do not dispose of the unit in general household waste or send it to a landfill. Improper disposal can contribute to environmental pollution, as certain materials may not decompose and could release harmful substances.

WARRANTY

KRD CATERING EQUIPMENTS LTD Ltd warrants the original purchaser of every new product (under normal and proper use and maintenance service as specified by Adexa Ltd and upon proper installation and start up in accordance with the instruction packet supplied with each unit) a one-year parts warranty.

Obligation under this warranty is limited to a period of one (1) year from the date of original installation.

The warranty is applicable to parts only and does not cover labour or servicing costs associated with the replacement or repair of defective parts.

The manufacturer shall not be liable for any incidental or consequential damages arising from the use of the product, including but not limited to loss of use, loss of time, or any other losses incurred.

WARRANTY CLAIMS:

All claims for parts must be made directly through the retailer in the first instance. All claims raised with the retailer should include:

- Your name
- Your company
- Model number
- Serial number of the product
- Delivery address

- Date of purchase
- Email
- Proof of purchase
- Phone number

- Information supporting the alleged defect/failure (video/photo)
- Photo of the dataplate

EXCLUSIONS!

This warranty does not cover:

- Damage caused by misuse, neglect, accidents, or unauthorised repairs.
- Normal wear and tear, including but not limited to cosmetic damage, scratches, or dents.
- Damage caused by external factors such as fire, water, or natural disasters.
- Any parts or accessories not included in the original purchase.
- Bulbs are not covered under warranty.