




Static Generator Installation Diagram

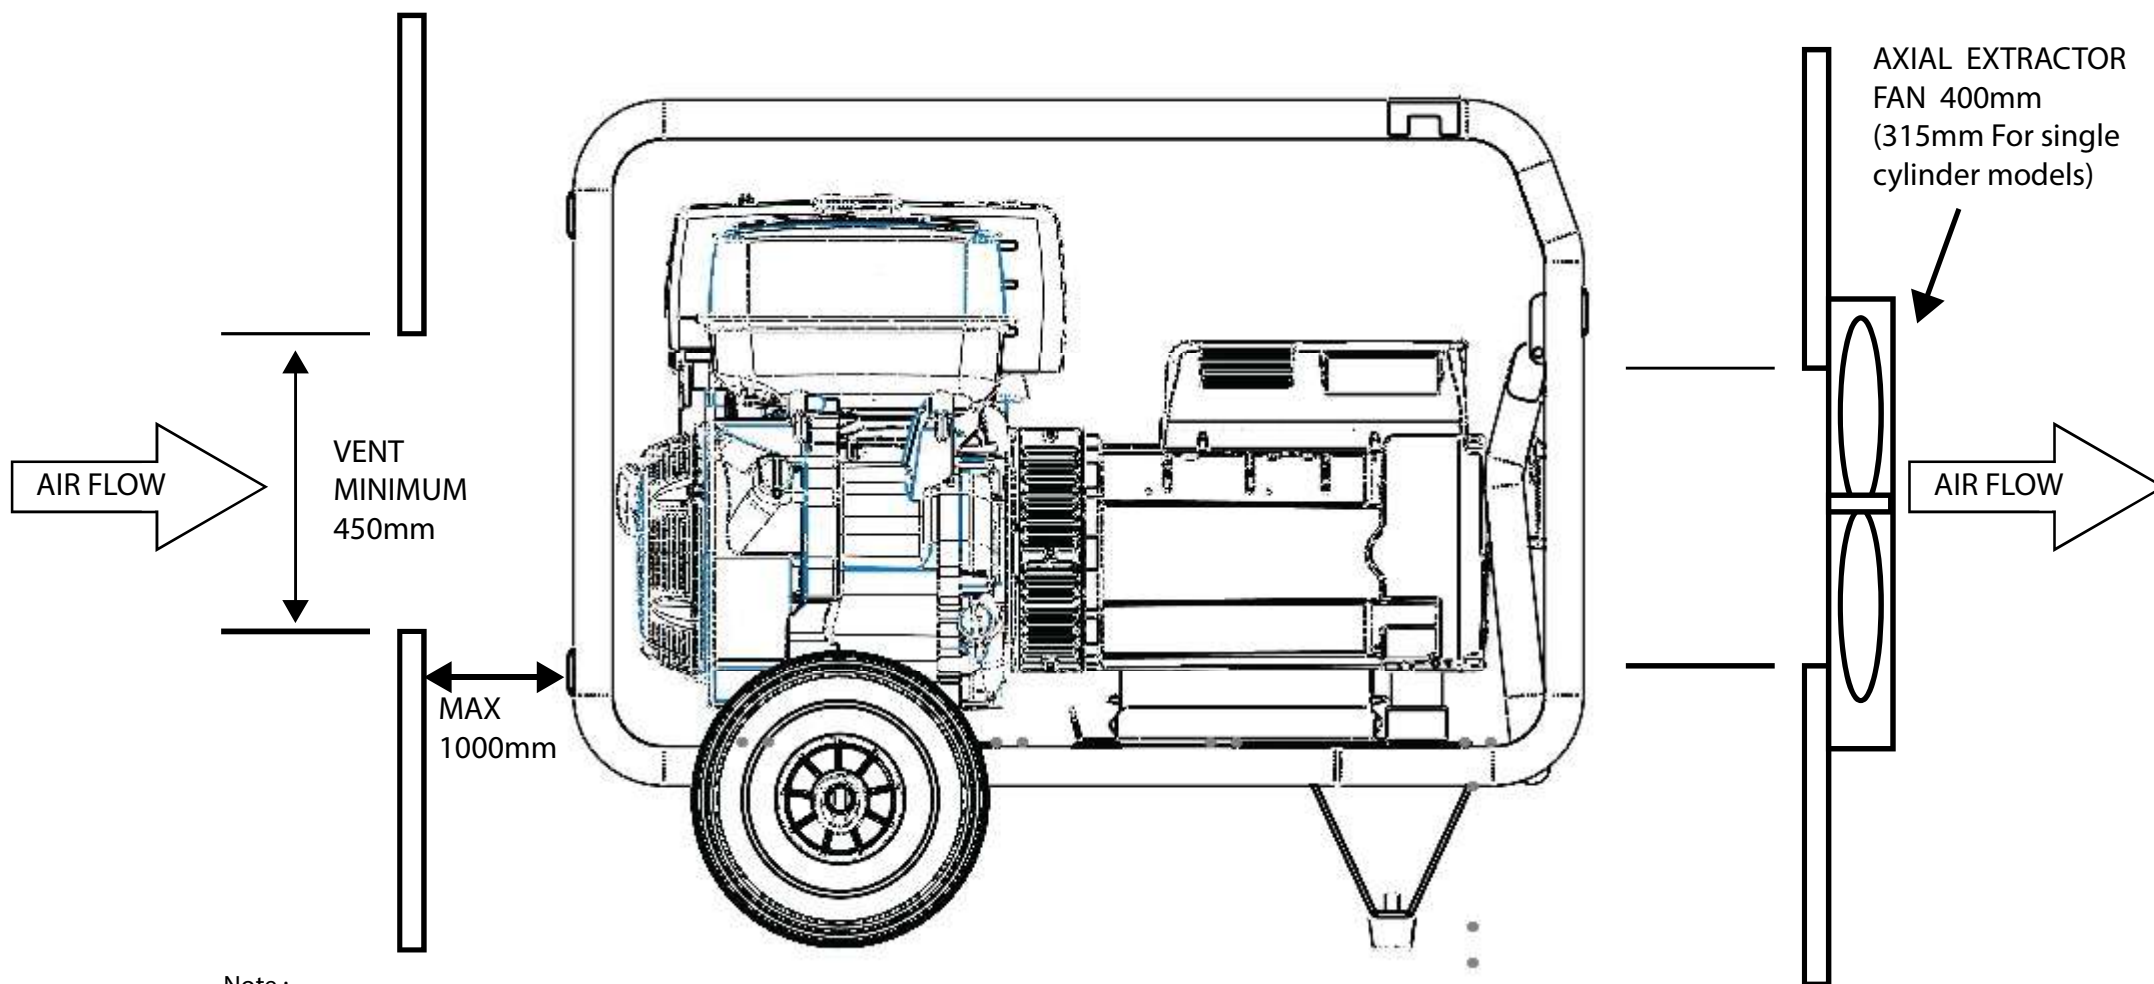

Note :

- 1) The unit is fitted with an air temperature sensor. Should the temperature of the cooling air reach or exceed 50 degrees centigrade the unit will cut out with an over temperature warning symbol flashing on the Deep-Sea control unit. Should this occur additional ventilation is necessary.
- 2) Exhaust gases are poisonous and at over 600 degrees centigrade so an exhaust extension must be fitted.
- 3) If containment is large enough to walk into a carbon monoxide alarm must be fitted.